

# One Click Casting





## OnCollab AT-C/AT-H Quick Start Guide

AVAOCATQSG V1.0  
82445-00070-33010-T

### • Connections and Indicators

#### **C** USB-C Connections

Connect AT-C to the USB-C port on the computer.  
\*The USB-C port must support DP signal output.

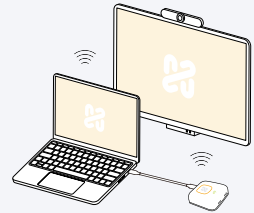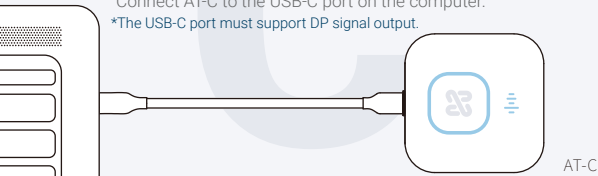

#### **1** Large Button - Projection


Display the status of the projection function.  
Press lightly to start/stop projection.

#### **2** Small Button - Video Conference

Display the status of the video conference devices.  
Press lightly to mute/unmute connected speaker and microphone.



#### **H** HDMI & USB-A Connections

Connect AT-H to the HDMI & USB-A port on the computer or another power source.

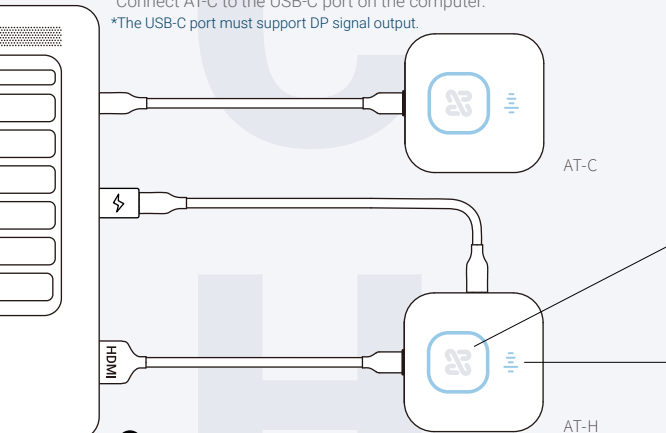

When using the AT-C/AT-H for the first time, please pair the unit with your OnCollab device.

## • Pairing

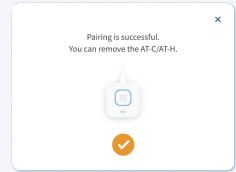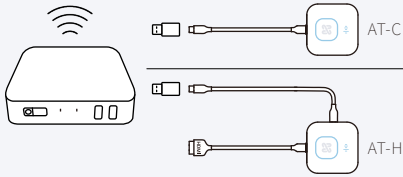

### 1 USB 3.0 Connections

Connect the AT-C/AT-H to the USB 3.0 port of the OnCollab device. The device will enter pairing mode.




### 2 Enter the Wifi password

After entering the password, the device will start pairing.

### 3 Pairing Successful

When the device has successfully paired, unplug the AT-C/AT-H.

## • Usage Instructions

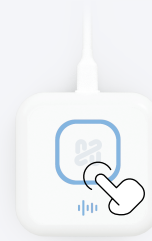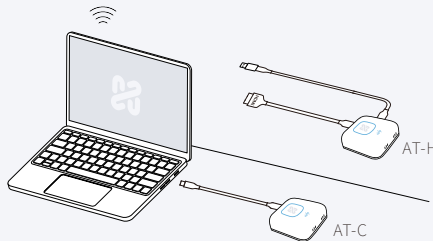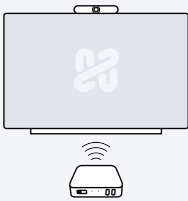

### 1 Setup your OnCollab Device

Turn on and setup the OnCollab Device that has been paired with AT-C/AT-H.

### 2 USB-C/HDMI Connections

Connect the AT-C to the USB-C port. Connect the AT-H to the HDMI & USB port.

### 3 Wait for the Light Indicator

Wait until the large button emit a constant blue light before using it.

## • LED Indicators

### 1 Large Button - Projection

Blue ☀️ Constant Light

Standby, ready for projection.

Orange 📶 Pulsing Light

Projection in progress.

Orange ✨ Blinking Light

Moderator Control Activated.

### 2 Small Button - Video Conference

Blue ☀️ Constant Light

Standby.

Orange ☀️ Constant Light

OnCollab camera detected.

Orange 📶 Pulsing Light 📹

OnCollab camera is in use.

Green ☀️ Constant Light

OnCollab speaker & microphone detected.

Green 📶 Pulsing Light 🎤

OnCollab speaker & microphone are in use.

Red ☀️ Constant Light 🚫🎤

OnCollab microphone is muted.

### 3 Small and Large Button - Other Status

Blue 📶 Pulsing Light

Establishing connection with Wi-Fi.

Blue ✨ Blinking Light

Searching for OnCollab devices.

Yellow ✨ Blinking Light

No audio/video output from the computer's USB-C/HDMI port.

\*If the connection cannot be established continuously, please check the network is normal or the password is entered correctly during pairing.

\*If OnCollab devices cannot be found continuously, please check if the OnCollab device is connected to the correct network or repair it.